



Installation Instructions

Your porch shades comes ready to hang.
Before unrolling the shade, hold it in position where you are going to hang it and make pencil marks through top hangers for positioning of open screw hooks.

When the screw hooks are in position, hang the porch shades by slipping the hooks through the hangers and unroll.

Sway cord, extra screw eyes, and sway cord tighteners are furnished to prevent shades from whipping in the wind.

If your porch is screened, the screen will keep the shades from blowing out. To keep the shades from blowing inward, place screw eyes at points "C". Tie one end of the cord at point "A", thread through cord tightener "D", then down through screw eye "C". Bring cord up through cord tightener again, tying a common knot above the cord tightener. Cut the cord above the knot. What is left is for use on the other side of the shade.

Repeat procedure.

If your porch is not screened, you will need a cord on both sides of porch shade. Follow this procedure: Place screw eyes at points "C". Tie end of cord at point "C". Run cord up behind shade to and through upper screw hook at "A", down along the front of the shade, through cord tightener, through lower screw eye "C", and then back up through screw tightener. Tie a common knot above the cord tightener and cut the cord above the knot using the balance of the cord for the other end of the shade.

This shade is equipped with an automatic stop which holds shade at any desired height. To raise or lower the shade, pull the cords which hang at the right side of the shade to the right. This releases the cord lock. To lock the shade at desired heights, pull cords to left and release.

It is best to allow porch shade to dry out thoroughly after each rainstorm before rolling them up, even though your porch shades are treated with mildew-resistant paints. This procedure will keep them looking bright.

If you take your shades down, store them in a dry place.