

Blinds.com Motorized (text instructions)

Note: This is a 2 person job with one person plugging in the battery wand and one person using the remote.

How to clear the remote - <http://videos.blinds.com/v/1117275247/how-to-reset-the-remote-control-blinds-com-motorized-cellular-shade/>

Unplug battery wand - - - Plug in battery wand –

(The next 3 steps will need to be done back to back without stopping immediately following plugging in the battery wand)-

Press P2 (on back of remote) wait for feedback - - - Press Stop - - - Press P2 wait for feedback.

Note: When a remote is cleared you will need to reset the Top and Bottom limits after the remote is set up again following setting up the remote.

How to set up a remote - <http://videos.blinds.com/v/1124435956/how-to-program-the-remote-control-blinds-com-motorized-cellular-shade/>

Unplug battery wand - - - Plug in battery wand –

(The next 3 steps will need to be done back to back without stopping immediately following plugging in the battery wand)-

Press the programming button on motor inside of shade (next to the power cable) - - -Press P2 (on back of remote) – Pause for a second - - Press P2 - pause for a second - - Press up.

How to set Top and Bottom limits - <http://videos.blinds.com/v/1765723260/how-to-set-the-top-and-bottom-limits-blinds-com-motorized-cellular-shade/>

Note: All of the steps listed below must be done in order and without stopping. IF at any point a wrong button is pushed you must start the process over. Also this can only be performed on a shade that has been assigned to a remote.

(Shade must be in the up position to begin this process)

Unplug battery wand - - - Plug in battery wand –

Press P2 wait for feedback - - -Press up - - -Press P2 wait for feedback - - - Press and hold stop until motor provides feedback - - - Press down until the product reaches the sill - - - Press and hold stop until the motor provides feedback.