Roller Shade Installation Instructions

Cassette System

Please Follow These Installation Instructions

 
You will need a pencil, tape measure, drill, screwdriver, pliers and appropriate fasteners

Step 1 choose the correct fastener



Rawl plug and sheet metal screw for concrete

Self drilling hex head for aluminum




Included Fasteners

Alternate Fasteners (not included)

Step 2 MOUNT THE BRACKETS

 Mount the brackets to the wall or window frame, with the outside brackets no further than 2 inches (5 cm) from the ends of the headrail. On wide shades, space the additional bracket(s) at equal intervals.



Step 3 MOUNT THE HEADRAIL

Mount the headrail. Position the headrail so that the furthest lip of the bracket slides underneath the the groove on the headrail at (A). Push the front of the headrail firmly backwards and toward the window until the lip on the rear of the headrail engages the bracket and snaps into place, (B) as shown.



Step 4 INSTALL THE TENSION DEVICE

Install the Tension Device. The Tension Device reduces the hazards of strangulation and entanglement of young children by limiting access to the control cord. Anchor the Tension Device, that is attached to the blind's control cord, to the window frame or wall, so that young children cannot pull the cord around their necks.

- A. Lower the blind.
- B. Hold the Tension Device upright
- C. Position the Tension Device on the window frame or the wall so that the Tension Device and control cord do not interfere with raising or lowering the blind. The Tension Device should be installed without stretching or pulling down on the control cord. Stretching the cord will cause excessive wear. Do not twist or cross the control cord.
- D. Holding the Tension Device upright, and in position, as shown, insert and secure the screw through the hole. The mounting screw must be secured into a solid surface or molly.

Step 5 OPERATE THE SHADE

Operate the shade by pulling down on one side of the cord — one side of the cord raises the shade, the other side lowers the shade. Do not lift the bottom rail with your hands. Also, be careful not to place objects on the window sill that will interfere with operating the shade or cause it to hang unevenly