


InstaFit™ Cordless Honeycomb Shade

Measuring Instructions

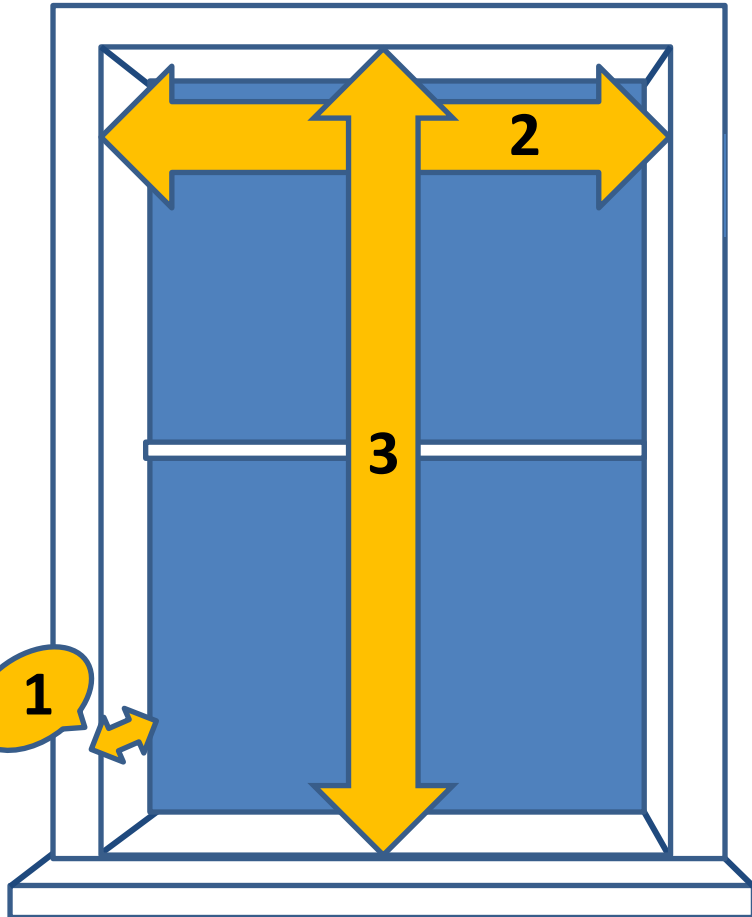

The InstaFit™ Cordless Honeycomb Shade is custom-made to fit perfectly inside your window frame, and will install in seconds, with no tools required. Measuring is easy too:

Using a steel tape measure, take the following 3 measurements.

- 1. Check Depth:** You will need a window frame that is at least 1 $\frac{3}{4}$ " deep to mount the product (if your window is shallower, InstaFit™ will not mount properly, but Blinds.com offers many other great products that will fit in your window frame).
- 2. Record Width:** Measure the exact width of the window opening at the top of the window where the headrail will be placed. Round up to nearest $\frac{1}{8}$ ".
- 3. Record Height:** Measure the exact height of your window opening in the center. Round up to nearest $\frac{1}{8}$ ".