


"FLOATING HEADER"

CENTER SUPPORT SYSTEM INSTALLATION INSTRUCTIONS

THIS IS AN EXAMPLE OF THE HEAVY DUTY 1" X 2" CENTER SUPPORT BAR, ALL "FLOATING HEADERS" ARE CONFIGURED THE SAME, ONLY THE DIMENSIONS ARE DIFFERENT

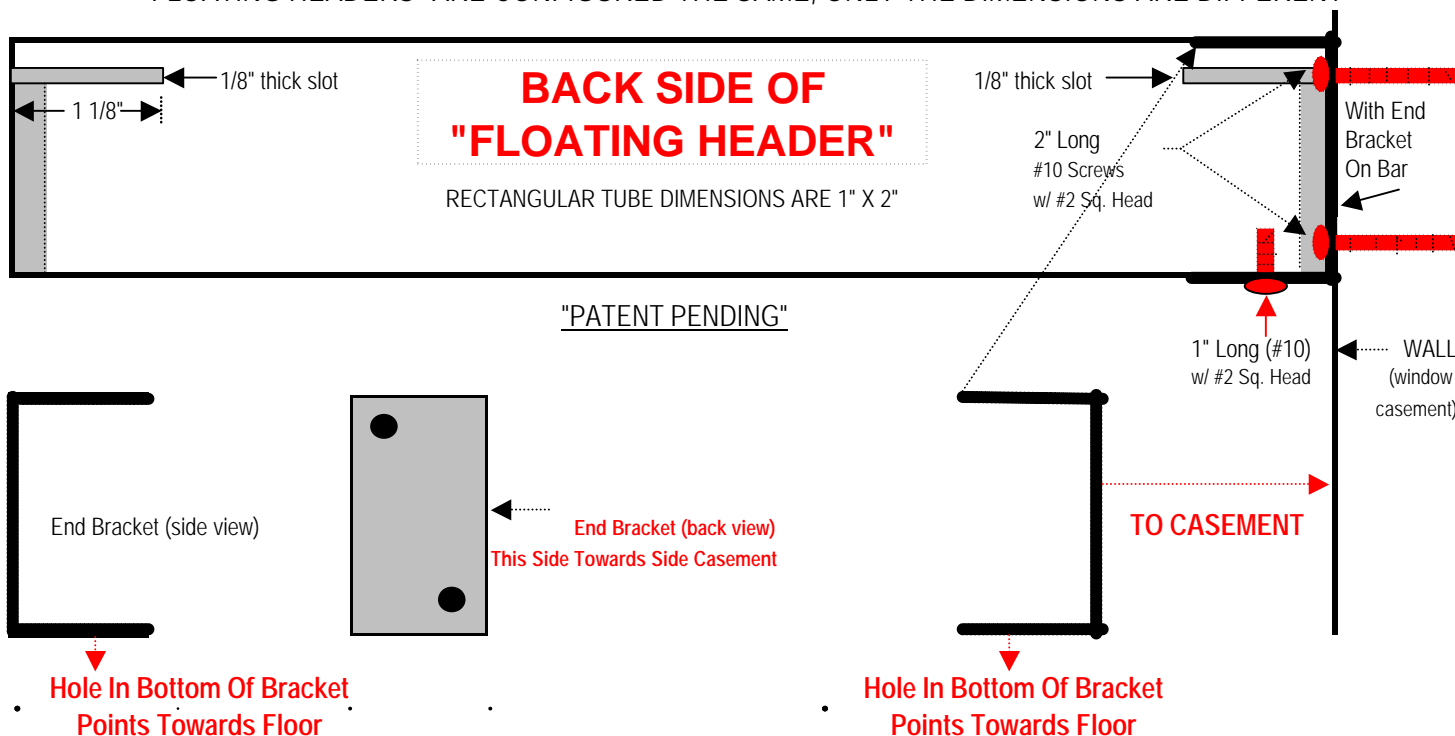

YOU WILL FIND THE FOLLOW ITEMS INCLUDED WITH YOUR SYSTEM TO COMPLETE YOUR INSTALLATION:

1. THE "FLOATING HEADER"
2. TWO SIDE BRACKETS (THESE WILL ATTACH TO THE SIDE WINDOW CASEMENT)
3. **FOUR 2" (# 10) SQUARE DRIVE TECH SCREWS (WHITE PAINTED HEADS)** USED TO ATTACH SIDE BRACKETS
4. **TWO 1" (# 10) SQUARE DRIVE TECH SCREWS (WHITE PAINTED HEADS)** USED TO ATTACH THE BOTTOM OF SIDE BRACKETS TO "FLOATING HEADER"
5. AMPLE NUMBER OF 1" (#10) SQUARE DRIVE TECH SCREWS TO BE USED TO ATTACH YOUR WINDOW COVERING BRACKETS TO THE "FLOATING HEADER" (**NON PAINTED SCREW HEADS**)

(YOU WILL NEED A **# 2 SQUARE DRIVER** FOR THE ABOVE DESCRIBED SCREWS, THEY MAKE FOR A MUCH CLEANER INSTALLATION AND ARE MUCH EASIER TO DRIVE INTO METAL)

INSTALLATION INSTRUCTIONS:

- ★ You can attach your product to the front or from the bottom of the "Floating Header". If installing an **Arch and a Blind**, try mounting brackets for both to the front of the "Floating Header" or **Arch to the top & Blind from the bottom**.
- ★ Screws mounting side brackets must be securely attached, if drywall make sure screws pass through into wood or metal!
- ★ Mark and install side brackets 1/16" lower than the height you would like the "Floating Header" to be. Be sure to leave at least 1/8" space on back side of bracket to allow "Floating Header" to slip over brackets.
- ★ After brackets are installed position the "Floating Header" so that the horizontal slots on the back can be slipped over the top of the side brackets, it will now drop down approximately 1/4" and the bottom of "Floating Header" should be sitting on bottom of side bracket. At this time you must secure the "Floating Header" to the brackets by driving the 1" (#10) sq. drive tech screws through bottom hole of brackets into "Floating Header". (**see diagram above**)
- ★ You can now attach your window covering hardware with screws provided and enjoy your unique installation!!!
- ★ Helpful Hint: before securing "Floating Header" to side brackets take it back down and install your window covering brackets, as it is much easier to drive-in tech screws using the floor or work surface. (Helps to reduce overhead work)

FOR TECHNICAL QUESTIONS PLEASE CALL "THE ULTIMATE INSTALL" AT: (425) 836-3731